




## Bulletin-Standard Sensor Appears as XL in App

1. A reboot of the sensor is required to fix this issue.
2. Open the app to the main sensor list.
3. Press and hold the sync button on the sensor showing as XL.
4. Continue to hold the sync button down (10-15 seconds)
5. You will notice on the screen the background of the sensor will start to blink green or change to green and it will say that the sensor updated just now.
6. Once the background stops blinking and the 'Last Updated' counter starts to count up...1 second ago...2 seconds ago....3 seconds ago.... release the sync button on the sensor.
7. Delete the sensor from the list. Swipe left on the sensor, and the delete button will appear. Tap Delete.

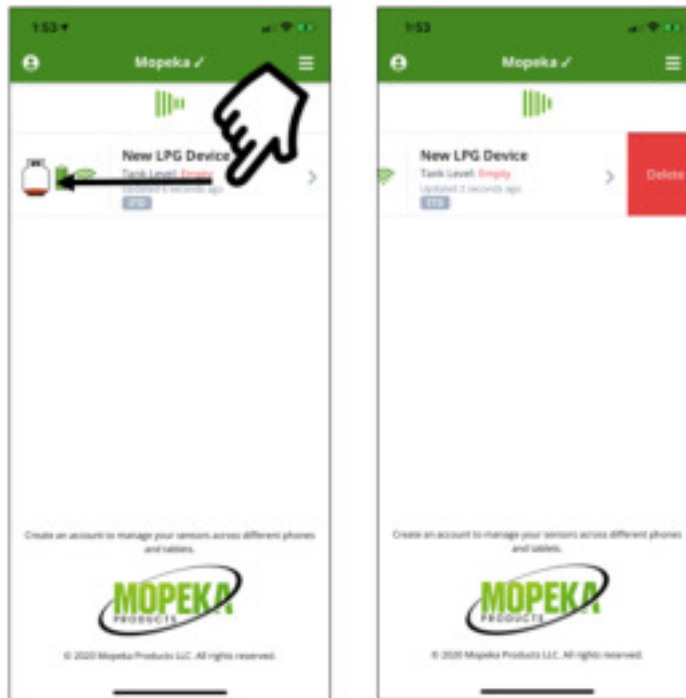

8. Press and release the sync button a couple of times to re-sync the sensor.
9. The sensor should now read as STD in the list.
10. Check if sensor function has returned to normal.
11. If any problems after this procedure, please contact us for sensor replacement.